THORNTHWAITE
EST 1933

Premium Seal Grab Rail 900mm

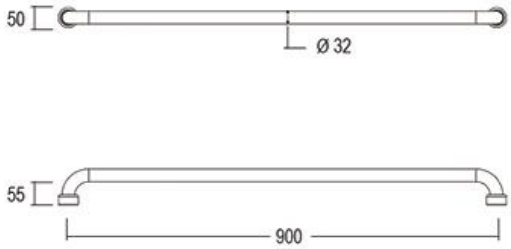

Installation Instructions

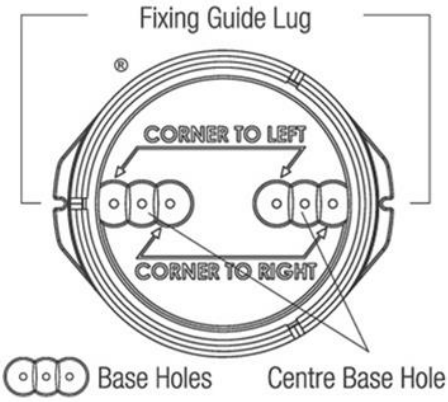

WARNING: Install with stainless steel 304 or 316 screws. Other types of screws may rust and void warranty.

Note: Do not use FLANGE PROTECTOR INSTALLATION GUIDE for corner grab rails if screws have to be positioned vertically.

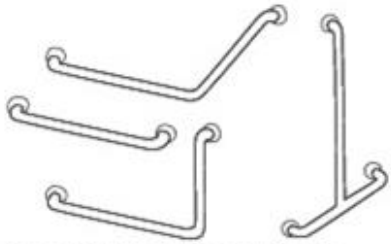

When marking out these grab rails, use centre base holes of flange protector.

1. Install straight grab rails including the horizontal section of any grab rail as per AS 1428.1, 800-810 mm from floor to top of rail. Make sure wall surface is flat and free from contaminants.

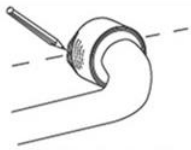

2. For STRAIGHT grab rails, position the flange protector guide lugs either vertical or horizontal. For CORNER grab rails, position the guide lugs horizontally ONLY then mark at fixing guide lugs.

3. Remove flange protector from grab rail flange. Align guide lug marks from step 2 and mark wall through base holes to pinpoint screw holes.

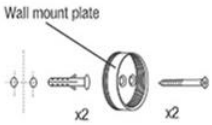

4. Fit dress ring if applicable. Drill spot marks with 7 mm bit. Screw wall mount plate to wall. ENSURE SCREWS ENGAGE WALL STUD OR OTHER SOLID SUBSTRATE.

5. Fit grab rail into wall mount plate and tighten lock nut firmly.

6. Screw flange cover to wall mount plate to secure the Thermoplastic Elastomer fitted HYGIENIC SEAL®.

When installing the Premium Seal Grab Rail with hand held shower, please ensure the handpiece cradle support of the Friction Slide is positioned to the side of the grab rail as shown in the image below. Cradle must NOT face user.
Incorrect installation will only result in improper use and damage to the Friction Slide Cradle. Warranty does not cover damage caused by improper use or faulty installation.

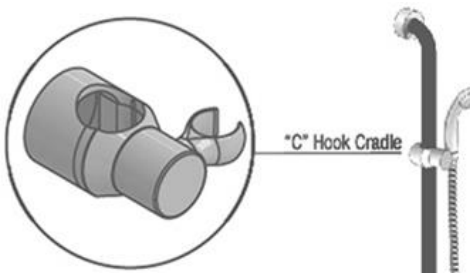

Thornthwaite Technologies Pty Ltd | ABN 67 113 609 019
79 Victoria Avenue, Chatswood NSW 2067, Australia
T 02 9417 4466 | F 02 9417 5231 | info@thornthwaite.com.au | www.thornthwaite.com.au