

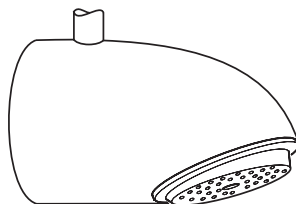


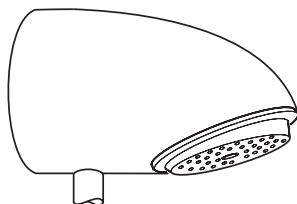

VANDAL RESISTANT FITTINGS

VR105, VR125, VR145
(VR106, VR115 Export only)

PRODUCT MANUAL

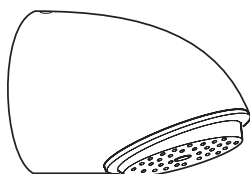

IMPORTANT

Installer: This Manual is the property of the customer and must be retained with the product for maintenance and operational purposes.

CONTENTS

Introduction.....	3
Description.....	3
Safety : Warnings.....	3
Pack Contents.....	4
Specification	5
Dimensions	8
Installation	9
General.....	9
VR105/VR106	10
VR115	11
VR125/VR145	12
Maintenance.....	13
General.....	13
Procedure - Changing or Removing the Flow Regulator.....	14
Spare Parts	15
1. VR105/VR106	15
2. VR115	15
4. VR145	16
3. VR125	16
Accessories	17
Notes	18
Customer Care.....	Back Page

INTRODUCTION

The Rada Vandal Resistant (VR) range of shower fittings are suitable for single or multiple shower installations. The VR125 may also be used for foot wash applications.

DESCRIPTION

A range of vandal resistant shower fittings to suit all pipework configurations. Adjustable spray, hard water and high performance cartridges are available as accessories.

A 9 l/min flow regulator for high system pressure or a passive flow restrictor for lower system pressures is incorporated in the shower fitting as standard. A 6 l/min regulator for system pressures more than 1.5 bar is also available as an option.

VR105	Vandal resistant shower fitting with fixed spray plate (spray angle can be set at 18.5° or 24.5° from vertical). For connection to concealed pipework with 1/2" BSP fittings.
VR106 (Export Only)	Vandal resistant shower fitting with fixed spray plate (spray angle can be set at 18.5° or 24.5° from vertical). For connection to concealed pipework with 1/2" BSP fittings. Fitted with a 6 l/min flow regulator.
VR115 (Export Only)	Vandal resistant shower fitting with fixed spray plate (spray angle can be set at 18.5° or 24.5° from vertical). For connection to concealed pipework with 15 mm compression fittings
VR125	Vandal resistant shower fitting with fixed spray plate (spray angle can be set at 18.5° or 24.5° from vertical). For connection to falling surface pipework
VR145	Vandal resistant shower fitting with fixed spray plate (spray angle can be set at 18.5° or 24.5° from vertical). For connection to rising surface pipework

SAFETY : WARNINGS





Rada products are precision engineered and should give continued superior and safe performance, provided:

1. They are installed, commissioned, operated and maintained in accordance with the recommendations given in this Manual.
2. Periodic attention is given, as necessary, to maintain the product in good functional order. Recommended guidelines are given in section: '**Maintenance**'.



PACK CONTENTS

☐ Examine the contents of the pack and tick the appropriate boxes to familiarise yourself with the part names and to confirm that all parts are included.




VR105/VR106

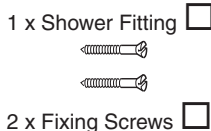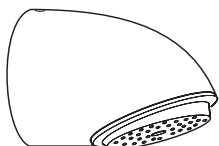





VR115

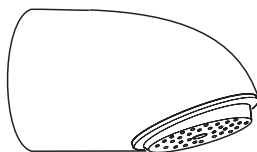

VR125

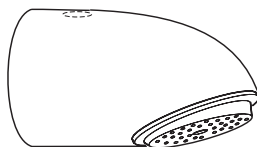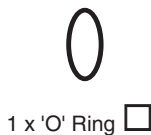

VR145

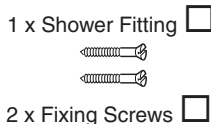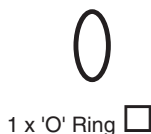

SPECIFICATION

Important Points:

1. The installation, commissioning and maintenance of this product must be carried out in accordance with instructions given in this Manual, and must be conducted by designated, qualified and competent personnel.
2. Installations must comply with **all** Local/National Water Regulations/Bye-laws (Scotland), Building and Plumbing Regulations.
3. Rada products are precision engineered and should give continued superior and safe performance, provided:
 - they are installed, commissioned, operated and maintained in accordance with these recommendations.
 - periodic attention is given as necessary to maintain the product in good functional order. Recommended guidelines are given in the **MAINTENANCE** section.
4. **Warning!** Continued use of this product in conditions outside the limits listed in this section can severely affect the performance and reduce the effective service life, and can present potential risk to users.
5. **Disinfectants:** In applications where system chemical disinfection is practised, chlorine can be used (calculated chlorine concentration of 50 mg/l [ppm] maximum in water, per one hour dwell time), at service interval frequency. Such procedures must be conducted strictly in accordance with the information supplied with the disinfectant and with all relevant Guidelines/Approved Codes of Practice. If in any doubt as to the suitability of chemical solutions, refer to Kohler Mira Limited, or Local Agent.

Normal Operating Conditions:

- daily usage of 1 - 6 hours.
- installation and usage environment not subject to extremes of temperature, unauthorised tampering or wilful abuse.

Temperature Range: Designed to accept water supplied between 5°C - 65°C.

Pressure Range: Recommended minimum maintained pressure at the inlet of the fitting 0.1 bar. Maximum maintained pressure at the inlet of the fitting 5.0 bar (with flow regulator fitted).

Spray Performance: Minimum flow rate necessary to achieve a fully formed spray pattern is 6.0 l/min.

Installation Height: Recommended Showering Installation Height is 2 metres above the floor surface.

Connections:

VR105 1/2" BSP parallel nipple (BS2779).

VR106: 1/2" BSP parallel nipple (BS2779).

VR115: 15 mm compression.

VR125: Socket with 'O' seal to accept 15 mm pipe (push fit, top entry).

VR145: Socket with 'O' seal to accept 15 mm pipe (push fit, bottom entry).

Composition/Manufacture: All materials are corrosion resistant.

Spray Body: Brass, polished chrome finish.

Mounting Bush/Inlet Nipple: Brass.

Spray Cartridges: Engineering plastic.

Flow Regulator: Engineering plastic.

Strainer: Stainless steel.


VR Security Kit: Plated mild steel. (Optional extra).

Rada Pipe: 15 mm x 700 mm stainless steel. (Optional extra).

All screws in contact with water are stainless steel.



Pressure Loss/Flow Rate Curves

With 'VR' spray plate

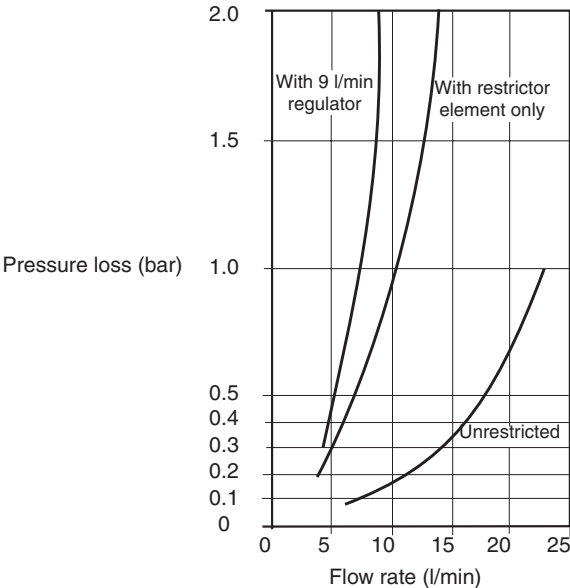


Spray Patterns at 9 l/min

VR105 with 'VR' spray plate

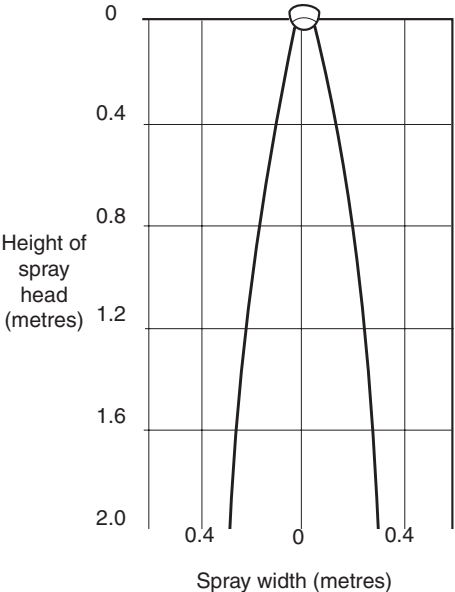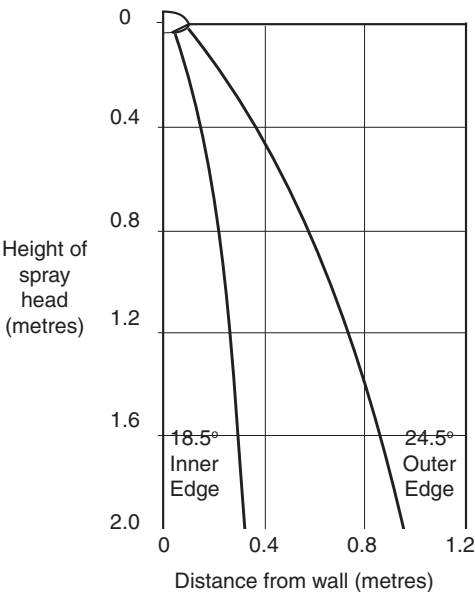


DIMENSIONS


VR105/VR106

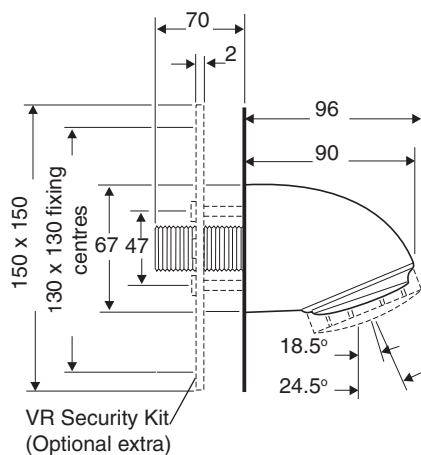


VR115

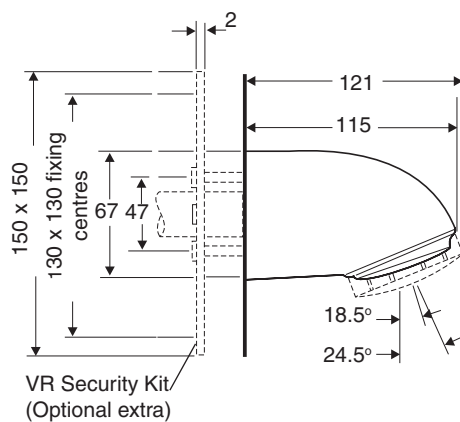

VR125

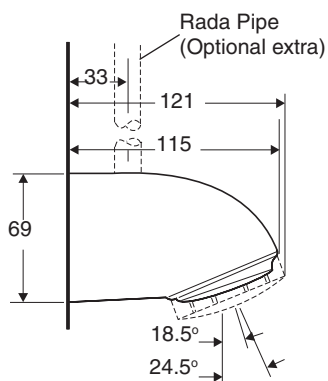

VR145

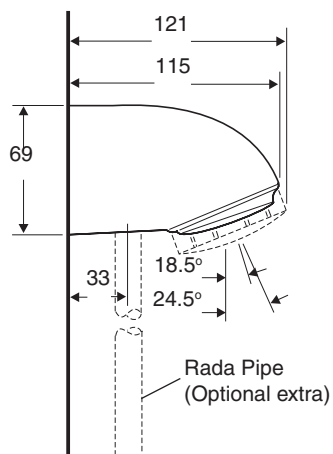

All dimensions in millimetres

INSTALLATION





General

Installation must be carried out in accordance with these instructions, and must be conducted by designated, qualified and competent personnel.

1. Supply pipes must be flushed to clear debris before connecting the shower fittings. Layout and sizing of pipework must be such that when other services are used, pressures do not fall below the recommended minimum at the shower head causing the spray pattern to collapse.
2. Avoid a position in which the product could become frozen.
3. **Do not** fit any form of flow control in the outlet pipework if the shower fitting is installed in conjunction with a product that requires the fitting to act as a vent (e.g. an electric shower).
4. Do not use excessive force when making connections.
5. Maintained pressures above 2 bar at the shower head, could result in excessive spray forces.
6. All models have a mounting bush, which is secured to the wall with two screws (wall plugs and screws provided, suitable for standard masonry). The spray body is retained on the mounting bush by a recessed hexagon-drive grubscrew (Hexagonal Wrench supplied).
7. The VR shower fitting may be bolted through the mounting bush onto the VR Security Kit (optional), which is mounted within the wall or behind a panel, for extra mounting security.



VR105/VR106

1. The supply pipe from the shower control must terminate at the wall surface with a 1/2" BSP female thread. The end of the fitting must be flush with, or below the finished surface of the wall.
 2. Undo the grub screw on the spray body with the 2.5 mm hexagonal wrench supplied, and remove the mounting bush.
 3. Screw the brass nipple into the female fitting, until it projects between 8 and 10 mm from the finished surface of the wall. If necessary, cut the brass nipple to the correct length and remove any burrs.
 4. Screw the mounting bush onto the brass nipple until the back of the mounting bush is flush with the wall.
 5. Mark the position of the two fixing holes and remove both the mounting bush and the brass nipple.
 6. Drill the two fixing holes and fit the wall plugs supplied.
- Warning!** Before drilling make sure there is no pipework or cabling in the wall behind the marked hole positions.
7. Apply liquid sealant or PTFE tape to the 1/2" BSP brass nipple. **Do not use paste.**
 8. Screw the brass nipple back into the female fitting.
 9. Screw the mounting bush onto the brass nipple using a 12 mm A/F hexagonal wrench (not supplied) and secure it with the fixing screws provided.
 10. Check the 'O' seal is fitted to the mounting bush.
 11. Fit the spray body to the mounting bush and secure with the grub screw.
 12. If necessary fit the hole plug.

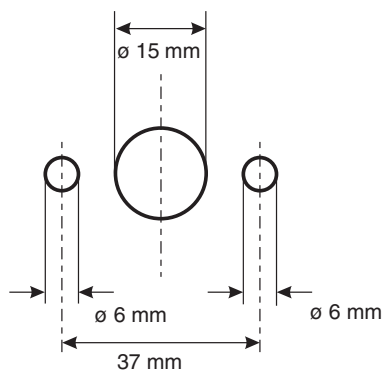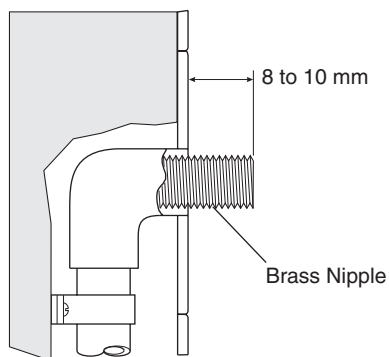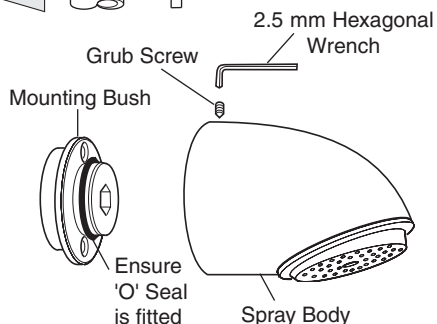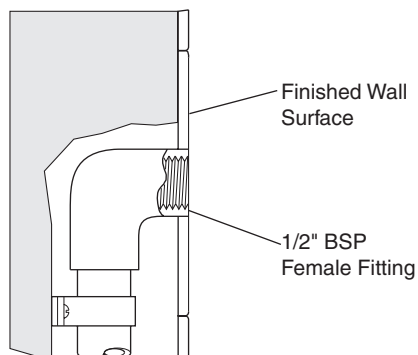


VR115

1. The VR115 fits directly onto a 15 mm pipe projecting through the wall. Ensure this inlet pipe extends 15 mm to 40 mm from the finished wall surface. Remove any burrs from the end of the pipe.
2. Undo the grub screw on the spray body with the 2.5 mm hexagonal wrench supplied, and remove the mounting bush.
3. Undo the compression nut and olive.
4. Slide the mounting bush on to the pipe and mark the position of the fixing holes.
5. Remove the mounting bush and drill the two fixing holes. Fit the wall plugs supplied.
6. Secure the mounting bush to the wall.
7. Slide the olive and compression nut over the inlet pipe and screw the compression nut to the mounting bush. Ensure the 'O' seal is fitted to the mounting bush.
8. Fit the spray body to the mounting bush and secure with the grub screw.

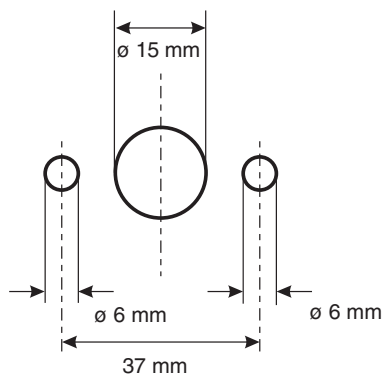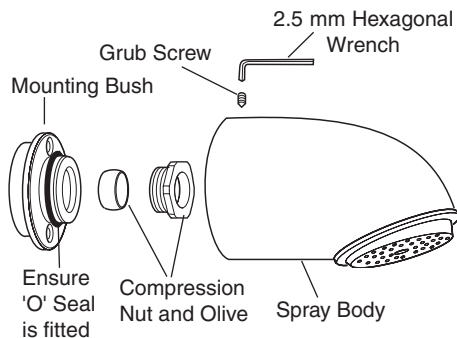

Warning! Ensure there is no pipework or cabling in the wall directly behind the fixing holes.

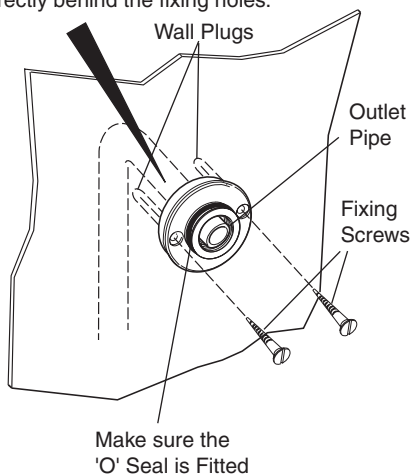

VR125/VR145

1. Undo the grub screw on the spray body with the 2.5 mm hexagonal wrench provided, and remove the mounting bush.

2. Place the mounting bush on the wall and mark the fixing hole positions.

3. Drill the fixing holes and fit the wall plugs supplied.




Warning! Before drilling make sure there is no pipework or cabling in the wall behind the marked hole positions.

4. Secure the mounting bush to the wall.

5. Ensure the 'O' seal is fitted to the mounting bush. Fit the spray body to the mounting bush and secure with the grub screw.

6. Check the 'O' seal is fitted in the spray body inlet hole.

7. Ensure there are no burrs or sharp edges on the ends of the 15 mm inlet pipe and fit the inlet pipe to the spray body. The pipe should not be inserted more than 40 mm into the spray body

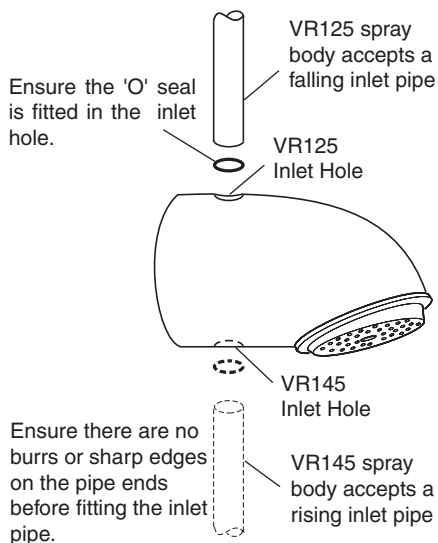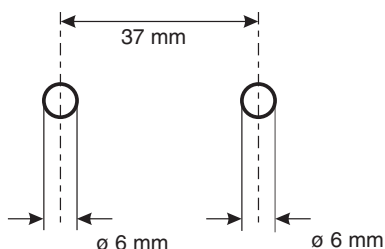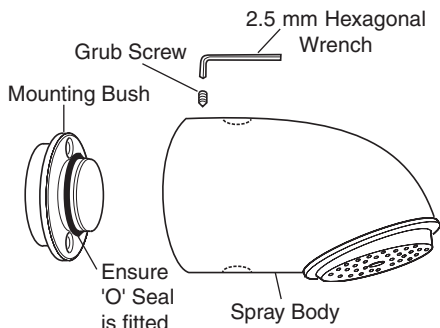

MAINTENANCE

General

Rada products are precision engineered and should give continued superior and safe performance, provided:

1. They are installed, commissioned, operated and maintained in accordance with our recommendations
2. Periodic attention is given as necessary to maintain the product in good functional order.

Maintenance

Maintenance must be carried out in accordance with these instructions, and must be conducted by designated, qualified and competent personnel.

External surfaces may be wiped clean with a soft cloth and, if necessary, a mild washing-up type detergent or soap solution can be used.

Warning! Many household and industrial cleaning products contain mild abrasives and chemical concentrates, and should **not** be used on polished, chromed or plastic surfaces.

Use only silicone based lubricants with this product.

All models include a removable mesh strainer which protects the flow regulator and spray plate from debris. This will need periodic cleaning, dependent upon the cleanliness of the supplies. The spray cartridges are removable for cleaning (for extra security, the fixed spray plate can only be removed using the Hexagonal Wrench provided), and will require periodic descaling, dependent upon the hardness of the water supplies.

When ordering spare parts, please state product type, i.e. Rada VR105, 106, 115, 125 or 145 shower fitting and identify part name and number. Refer to section: '**Spare Parts**'.


Procedure - Changing or Removing the Flow Regulator

1. Use the 3 mm A/F Hexagonal Wrench (supplied) with the fitting and remove the screw at the centre of the spray plate, remove the spray plate. If the 300R or 400R spray cartridge is used, remove the cartridge by turning fully anticlockwise. If the 310R spray cartridge is used, pull off the plastic retaining trim and turn the cartridge fully anticlockwise.
2. Use a 12 mm A/F Hexagonal Wrench (not supplied) and unscrew and remove the flow regulator from the shower fitting (refer to illustration).
3. Remove or replace the flexible flow regulator.

Note! The flow regulator must be removed if the 400R spray cartridge is used.

4. Assemble the restrictor/strainer and spray plate in the reverse order of removal.
Note! Fit the 'O' seal in to the groove in the shower fitting and **NOT** on to the spray plate.

The flow regulator must be removed if the 400R spray cartridge is used.

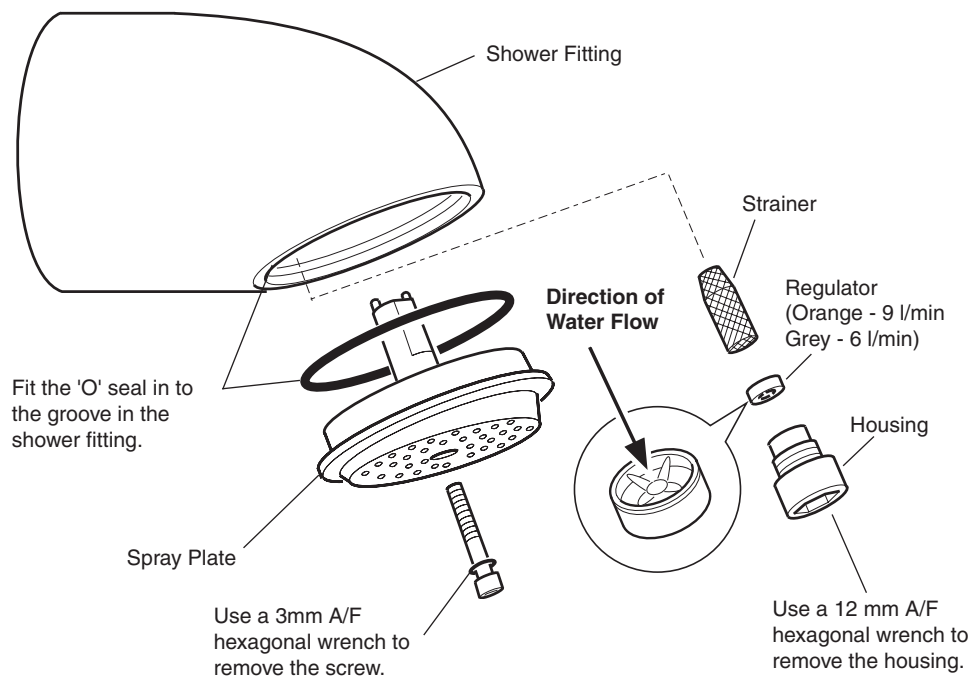


Removing Flow Regulator

SPARE PARTS


1. VR105/VR106

090.26	Mounting Bush
555.96	Nipple
618.19	Grub Screw
633.19	VR 'O' Seal Pack
857.33	9 l/min Flow Regulator Assy (with orange restrictor)
857.34	6 l/min Flow Regulator Assy (with grey restrictor)
937.22	VR Spray Plate

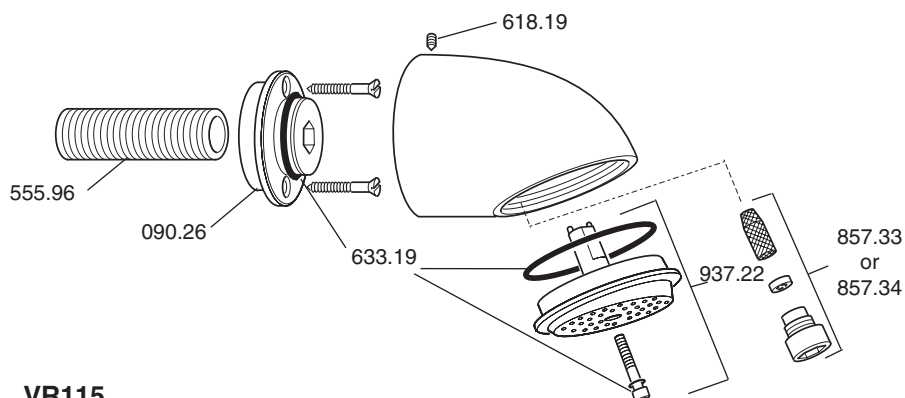


2. VR115

441.66	Backplate Assembly
618.19	Grub Screw
633.19	VR 'O' Seal Pack
857.33	9 l/min Flow Regulator Assembly (with orange restrictor)
857.34	6 l/min Flow Regulator Assembly (with grey restrictor)
937.22	VR Spray Plate

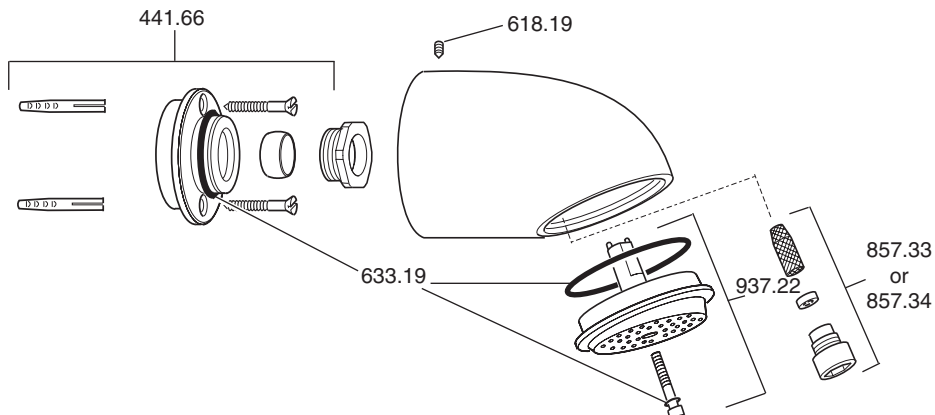


3. VR125

- 090.27 Mounting Bush
- 618.19 Grub Screw
- 633.19 VR 'O' Seal Pack
- 857.33 9 l/min Flow Regulator Assembly (with orange restrictor)
- 857.34 6 l/min Flow Regulator Assembly (with grey restrictor)
- 937.22 VR Spray Plate

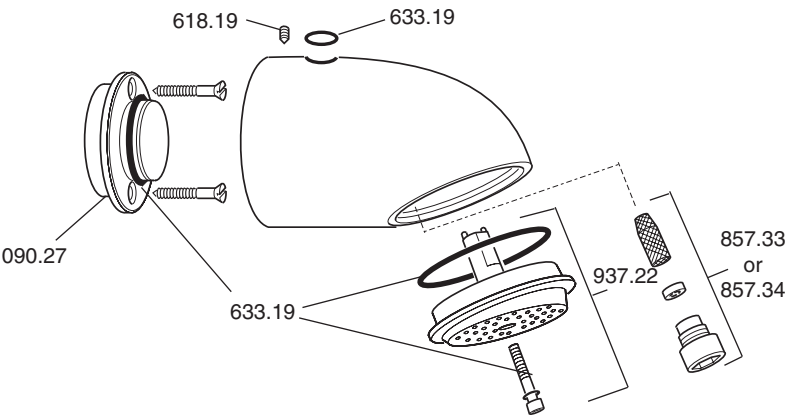


4. VR145

- 090.27 Mounting Bush
- 618.19 Grub Screw
- 633.19 VR 'O' Seal Pack
- 857.33 9 l/min Flow Regulator Assembly (with orange restrictor)
- 857.34 6 l/min Flow Regulator Assembly (with grey restrictor)
- 937.22 VR Spray Plate

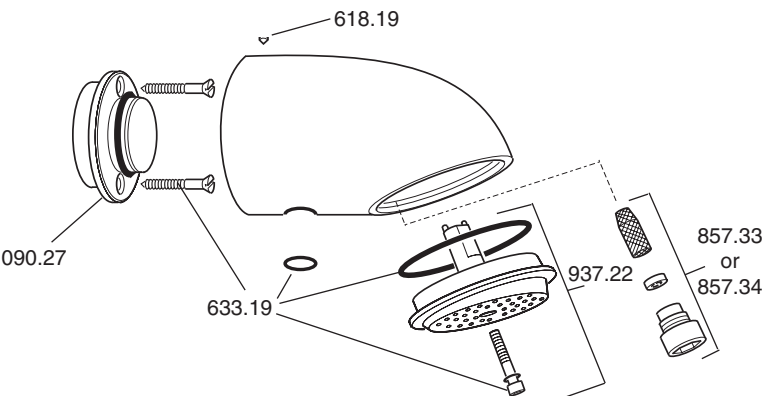

ACCESSORIES

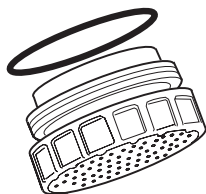


300R Adjustable Spray Cartridge
(Part No. **098.87**)

with 'start', 'active' and 'relax' modes
(chrome finish).




310R Hard Water Spray Cartridge
(Part No. **098.88**)

self-draining with 'push-clean' action
(chrome finish).

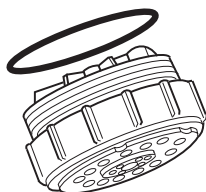

400R High Performance Spray Cartridge
(Part No. **098.89**)

with 'start', 'pulsate' and 'champagne' modes
(white finish). Minimum pressure 0.5 bar.
Requires removal of the flow regulator.

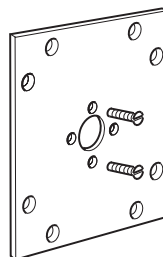

VR Security Kit
(Part No. **936.94**)

concealed mounting plate offering even
greater security, for use with VR105.



Rada Riser Pipe
(Part No. **936.03**)

stainless steel, 15 mm x 700 mm
supply pipe for use with VR125/145.



AD35 Extended Connection Nipple
(Part No. **555.74**)

250 mm x 1/2" BSP parallel nipple
(to BS2779)

Note! For 'high risk' applications, the 300R, 310R and 400R spray cartridges are not recommended as the cartridges may be removed without the use of tools. All accessories are available from Approved Technical Stockists and builders/plumbers merchants.

NOTES

NOTES

CUSTOMER CARE

Guarantee

Your product has the benefit of our manufacture's guarantee which starts from date of purchase. Within the guarantee period we will resolve defects in materials or workmanship, free of charge, by repairing or replacing parts or product as we may choose.

This guarantee is in addition to your statutory rights and is subject to the following conditions:

- The product must be installed and maintained in accordance with the instructions given in this user guide.
- Servicing must only be undertaken by us or our appointed representative. **Note!** If a service visit is required the product must be fully installed and connected to services.
- Repair under this guarantee does not extend the original expiry date. The guarantee on any replacement parts or product ends at the original expiry date.
- For shower fittings or consumable items we reserve the right to supply replacement parts only.

The guarantee does not cover:

- Call out charges for non product faults (such as damage or performance issues arising from incorrect installation, improper use, inappropriate cleaning, lack of maintenance, build up of limescale, frost damage, chemical attack, corrosion, system debris or blocked filters) or where no fault has been found with the product.
- Water or electrical supply, waste and isolation issues.
- Compensation for loss of use of the product or consequential or indirect loss of any kind.
- Damage or defects caused if the product is repaired or modified by persons not authorised by us or our appointed representative.
- Routine maintenance or replacement parts to comply with the requirements of the TMV2 or TMV3 healthcare schemes
- Accidental or wilful damage.
- Products purchased ex-showroom display.

What to do if something goes wrong

If your product does not work correctly refer to this manual for fault diagnosis and check that it is installed and commissioned in accordance with our instructions. If this does not resolve the issue, contact us for help and advice.



Technical Helpdesk Service

Contact our Customer Services Team for product advice, to purchase spare parts or accessories or to set up service visit. You can contact us via phone or e-mail - contact details below. Please provide your model name, power rating (if applicable) and date of purchase.



Rada Website (www.radacontrols.com)

From our website you can view our full product catalogue or download a brochure.



Spares and Accessories

We hold the largest stocks of genuine Rada spares and accessories.



Service/Repairs

No one knows our products better than our nationwide team of Service Technicians. We can carry out service or repair work to your product both during and after the guarantee period. You have the assurance of a fully trained Technician, genuine Rada spare parts and a 12 month guarantee on any chargeable work done.

Service Contracts

Regular servicing ensures your product continues to operate at the peak of performance. We offer annual or bi-annual servicing carried out by our fully trained technicians subject to site survey

To Contact Us - UK Customer Service & Specification Enquiries



0844 571 1777

Calls cost 7p per minute plus your phone company's access charge



Fax: 0844 472 3076



Email – Visit

rada_technical@mirashowers.com



By Post: Rada Controls, Cromwell Road, Cheltenham, Gloucestershire GL52 5EP

To Contact Us: Eire Only



01 531 9337



E-mail:

CustomerServiceEire@mirashowers.com

*Rada is a registered trade mark of
Kohler Mira Limited.*

*The company reserves the right to alter
product specifications without notice.*



rada